



MK2 SERIES: Installation guide

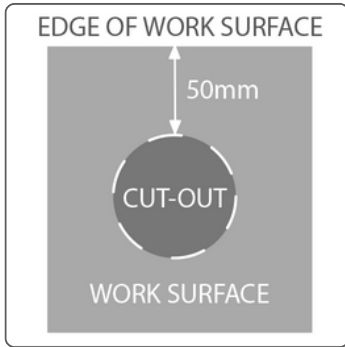


Step 1

Make a cut-out with a diameter of 95 mm in a predetermined location. Ensure there is sufficient clearance: 450 mm below the work surface and at least 50 mm between the edge of the cut-out and the edge of the work surface. Ensure the cable can reach the power point with ease.

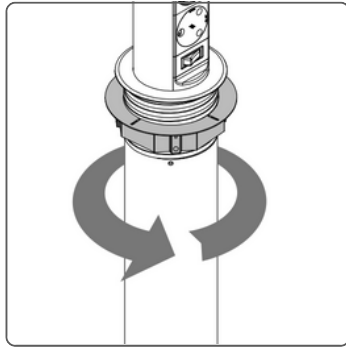


Step 2

Remove the locking collar by turning it in an anti-clockwise direction (when viewed from below). Do not connect the unit to power until the installation is complete.

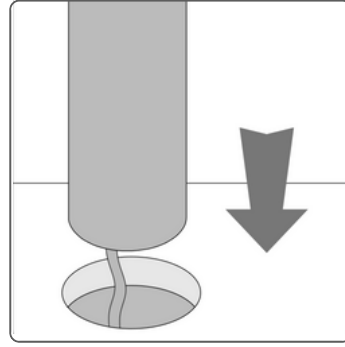

Step 3

Drop the unit, cable first, into the pre-cut mounting hole and angle the unit in the preferred orientation.

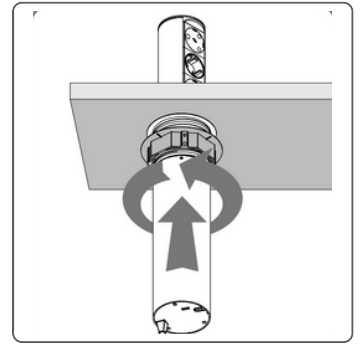

Step 4

Once the unit is positioned in the opening, proceed to attach the locking ring by twisting it in a clockwise direction (when viewed from below) until it is tightly fastened. Be sure to keep the unit in the desired orientation while fastening.

Dimensions

Mounting Hole: $\varnothing$ 95mm
Dimensions: 613mm x 111mm

Applicable Products

- MK2
- MK2 CC

Surface Thickness

10mm – 50mm (Approx. 2/5 in. – 2 in.)

Maintainence and Care

- Ensure unit is disconnected prior to cleaning.
- Clean the unit with a damp cloth and dry immediately.
- Do not use harsh chemical solvents.

Warning

- For indoor use only.
- If any malfunction occurs, do not attempt to repair.
- Return product to manufacturer for repair.
- Do not insert foreign objects into data outlets.
- For counter top mounting.
- For other options, contact your distributor.

Warranty

All products carry a 24 month limited warranty which excludes normal wear and tear and product abuse. The warranty will be void in the event of product tampering. Extended warranties are available by request.