



PD 5 SERIES: Installation guide

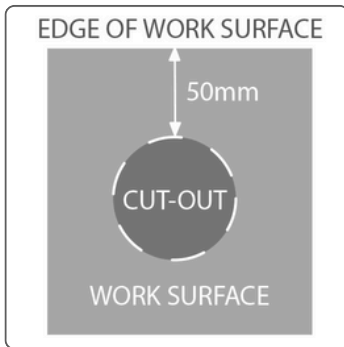


Step 1

Make a cut-out in a predetermined location with a diameter of 80mm. Ensure there is sufficient clearance: 450mm below the work surface and at least 50mm between the cut-out edge and the edge of the work surface. Ensure the cable can easily reach the power point.

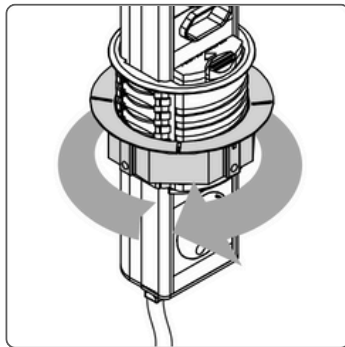


Step 2

Remove the locking collar by turning it in a clockwise direction (when viewed from above). Do not connect the unit to power until the installation is complete.

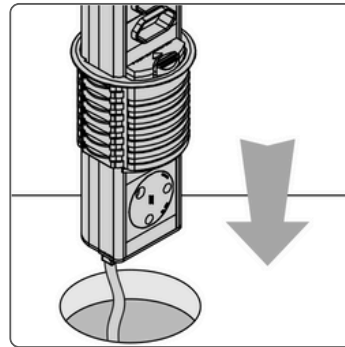

Step 3

Drop the unit, cable first, into the pre-cut mounting hole and angle the unit in the preferred orientation.

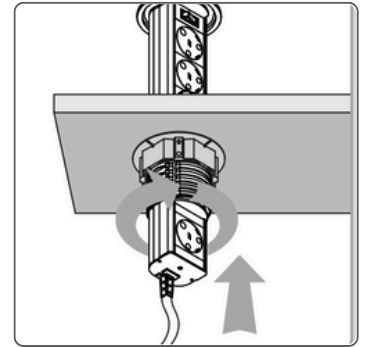

Step 4

Once the unit is positioned in the opening, proceed to attach the locking ring by twisting it on in a clockwise direction (when viewed from below) until tightly fastened. Be sure to keep the unit in the desired orientation while fastening.

Dimensions

Mounting Hole: Ø 80mm (Approx. 3-3/20 in.)
PD 5 dimensions : 342mm x 103mm
PD 545 AC dimensions : 392mm x 103mm
PD 565 C dimensions : 392mm x 103mm

Applicable Products

- PD 5
- PD 545 AC
- PD 565 C

Surface Thickness

10mm - 50mm (Approx. 2/5 in. - 2 in.)

Maintenance and Care

- Ensure unit is disconnected prior to cleaning.
- Clean the unit with a damp cloth and dry immediately.
- Do not use harsh chemical solvents.

Warning

- For indoor use only.
- If any malfunction occurs, do not attempt to repair.
- Return product to manufacturer for repair.
- Do not insert foreign objects into data outlets.
- For counter top mounting.
- For other options, contact your distributor.

Warranty

All products carry a 24 month limited warranty which excludes normal wear and tear and product abuse. The warranty will be void in the event of product tampering. Extended warranties are available by request.