



1. Thread the power cable through the foot and connect it to the plug on the joint.

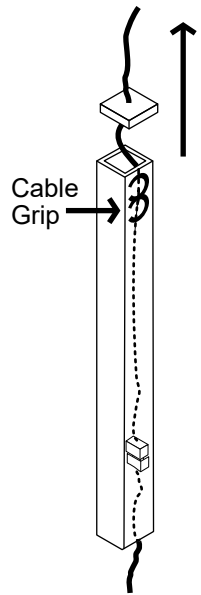


2. Attach the cable to the cable grip before pulling the cabling tight and in order not to disconnect the connection in point 1.

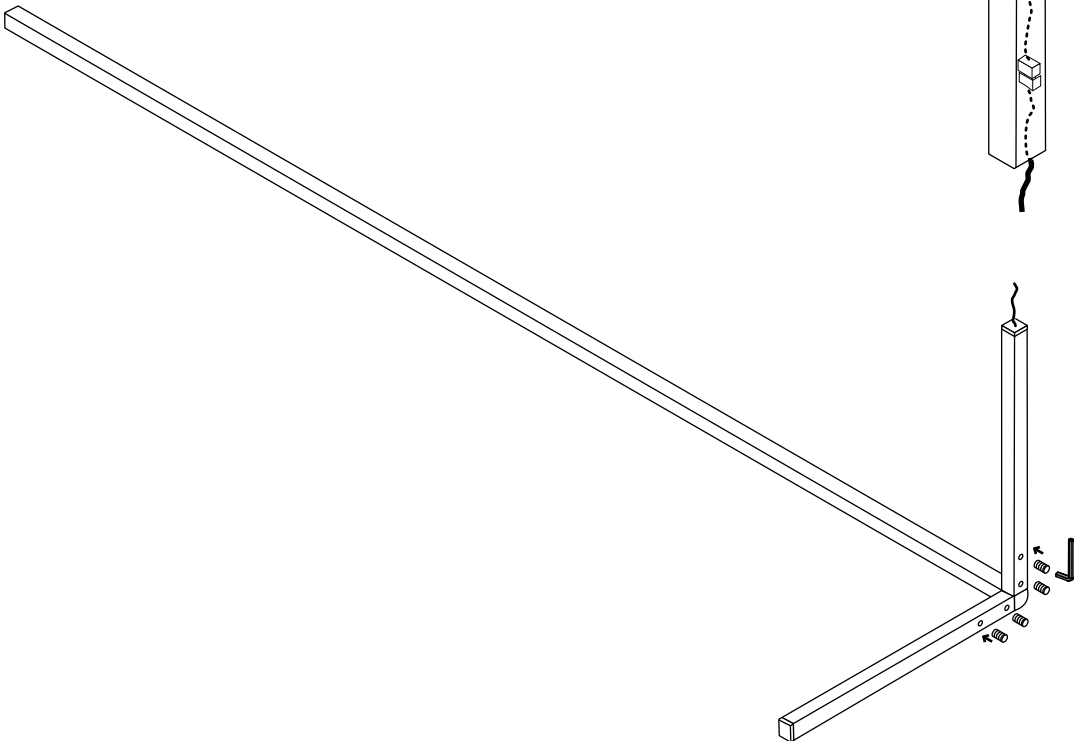

3. Connect the legs to the joints, do one final adjustment on the end cap and cabling in order to attach the end cap to the foot.

Tighten the feet to the joints with the allen key grub screws provided.

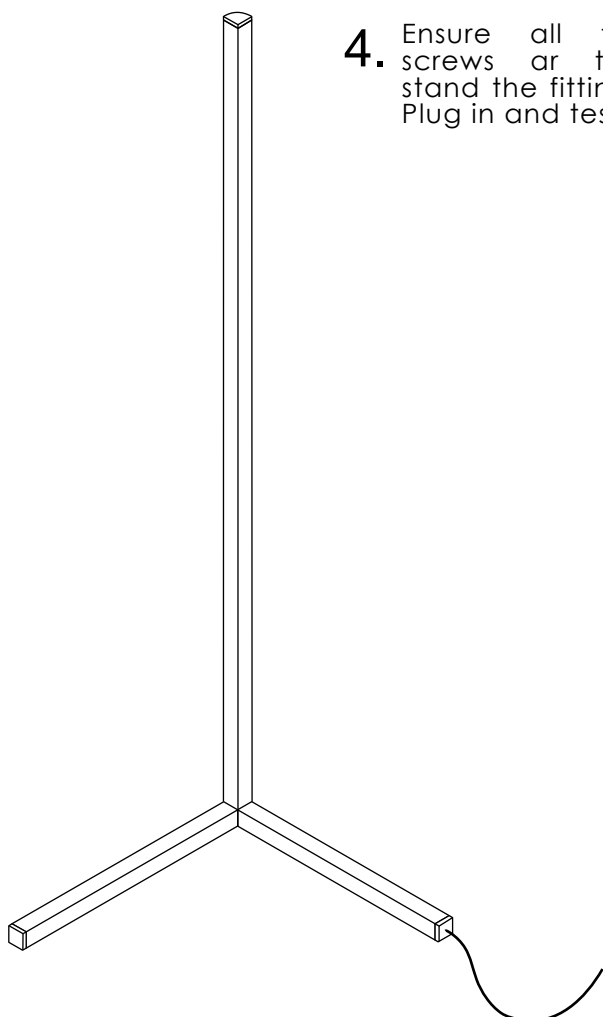

4. Ensure all the grub screws are tight and stand the fitting upright. Plug in and test.